dipolomat Smart TFL Touch screen & Finger print Lock




diplomat SAFE ▲ CI프로메트 書口

Enjoy Security with Smart TFL

diplomat Touch screen and Finger print lock is an advanced digital lock for easy use with user code or finger print. It looks simple but has all necessary functions for convenience and security.



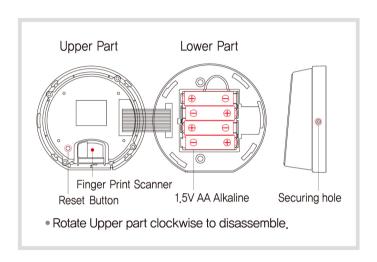

FEATURES

- (1) Operated with user code or finger print
- 2) Simple to enter user code or finger print
- ③ User code digits available: 4 to 16
- (4) Finger prints available: 128
- (5) FND (Flexible Numerical Display) window
- 6 Dual Locking with two codes
- (7) Code and Sound Hide system
- (8) Built-In Alarm system
- (9) Paralysis system
- (10) Unlimited Scramble numbers to avoid peeps
- (1) Emergency Master Code system
- (2) Reset button on backside of upper part
- (3) Low Battery Indication



060TFL (RAL9002)



060TFL (BLC)

It is applicable to all diplomat Safes for Home, Office and Commercial use.







Office Cabinets



ROC5204TFL

Premium Safe NEXT









DPS8500TFL

DPS5500TFL

DPS6500TFL

Users Guidance Q (E RoHS



A. CODE

A1 How to open?

- 1) Touch SCREEN \rightarrow USER CODE \rightarrow OPEN
- 2) Turn knob(key of handle) clockwise and open the door.
- 1. If a wrong code entered, bi-ric sound and ErrOr on FND. 2. If wrong codes entered 5 times, TFL paralyzes 5 minutes.
- * PARALYSIS: 1) No response against screen touch.
 - 2) Paralysis time appears on FND (5-4-3-2-1) per minute.
 - 3) After 5 minutes, paralysis gets normal.

How to enter a user code?: Door open

- 1) Press M button on the door back.
- 2) Touch New CODE → ENTER
- Prior to closing the door, please confirm with A1 Opening instruction if the new code registered correctly.

A3 How to lock?

- Model 119~530 : Close the door and turn knob(key of handle) counter-clockwise.
- Over model 006 : Closing the door, it automatically locks.

B. FINGER PRINT

How to enter finger print? : Door open

- 1) Press M button on the door back.
- 2) Touch $3 \rightarrow \text{ENTER} \rightarrow \text{USER CODE} \rightarrow \text{ENTER}$
- 3) Scan FINGER PRINT twice
- 1. Please confirm with B2 Opening Instruction if the finger print correctly registered.
 - 2. Worn-out Finger Print can't be entered.
- * 128 finger prints are acceptable.

How to open with finger print?

- 1) Touch SCREEN
- 2) Scan FINGER PRINT
- 3) Turn knob(key of handle) clockwise and open the door.
- 1. If a wrong finger print entered, bi-ric sound and ErrOr on FND. 2. If wrong finger prints entered 5 times, TFL paralyzes 5 minutes.
- * PARALYSIS: 1) No response against screen touch.
 - 2) Paralysis time appears on FND 5-4-3-2-1 per minute.
 - 3) After 5 minutes, paralysis gets normal.

How to delete finger prints? : Door open

- 1) Press M button on the door back.
- 2) Touch $\boxed{\text{ENTER} \rightarrow 3 \rightarrow \text{ENTER}}$
- If one finger print is removed, all the registered finger prints are erased simultaneously.

C. THE OTHER FEATURES

- C1 Dual Locking: Two different codes required.
 - Enter 2nd code $M \rightarrow 2 \rightarrow ENTER \rightarrow 2nd CODE \rightarrow ENTER$
 - To set or unset dual locking? M → 9 → ENTER
 - When Dual Control unsets, the 2nd code is automatically removed.
 - To open in dual locking? SCREEN → 1st CODE → OPEN → 2nd CODE → OPEN
 - The dual locking state, impossible to unlock with finger print.
- C2 Code and Sound Hide: To set or unset $M \rightarrow 7 \rightarrow ENTER$
- Scramble Numbers: When opening a safe, unlimited scramble numbers can be put before and/or after the real code to avoid peeps.
- Reset Function: When TFL doesn't react, press the reset button to initialize the lock.
- C5 Alarm setting: If a safe is tilted over 45° or impacted, the built-in alarm honks.
 - To set $M \to 8 \to ENTER$ To unset ① SCREEN $\to USER$ CODE $\to OPEN$ ② SCREEN $\to FINGER$ PRINT SCAN ③ In dual locking state, | SCREEN \rightarrow 1st CODE \rightarrow OPEN \rightarrow 2nd CODE \rightarrow OPEN
 - Alarm honks 3 hours. If it is considered the alarm has honked over 30 minutes, the batteries must be replaced.

